

INSTRUCTIONS FOR SCANNING THE NEW 3ABN FREQUENCY ARION AF-3330

PLEASE BE AWARE – THESE INSTRUCTIONS WILL BE INEFFECTIVE IF YOU HAVE PERFORMED A FACTORY RESET
Please follow the steps as listed. Do not change anything unless specified. Please do not perform a factory reset.
Christian Satellite is not liable for any damage or loss of programming that may be incurred by following these instructions.

STEP 1 - Scanning the frequency 12546 for the new location of 3ABN

- A. Turn on your TV and receiver
- A. By using your remote press the **MENU** button and scroll **LEFT** or **RIGHT** and to **SEARCH CHANNEL** and then scroll down and select **MANUAL SEARCH** and press the **OK** button. The receiver may request a password. Enter **9402** by using the numbers on the remote or if that does not work try **0000**
- B. Once you are in **MANUAL SEARCH**, highlight **SATELLITE** and scroll **LEFT** or **RIGHT** and select **OPTUS B3**. Please note that **Optus D2 will not be in the list**
- C. Next scroll down to **FREQUENCY** and enter **12546** by using the numbers on the remote
- D. Next scroll down to **SYMBOL RATE** and enter **22500** by using the numbers on the remote
- E. Next scroll down to **POLARIZATION** and press left or right on the remote to select **VER**
- F. Next scroll down to **FEC** and select $\frac{3}{4}$
- G. Next scroll down to **NETWORK SEARCH** and select **NO**
- H. Next scroll down to **FTA ONLY** and select **YES**
- I. Next press the **RED (UHF)** button on the remote and the receiver will begin searching for the channels
- J. Once the search is completed the receiver will display a message **"SAVING AND THEN SEARCH SUCCESS"** next press the **OK** button. Next press the **EXIT** button

STEP 2 – Organising channels

- A. From the **MAIN MENU**, scroll left or right and highlight **EDIT CHANNEL** and press the **OK** button. The receiver will request a password. Enter **9402** by using the numbers on the remote or if that does not work try **0000**
- B. On the left of the screen, select **TV** and press the **OK** button
- C. Next highlight the channel you would like to move and press the **GREEN (AUDIO)** button on your remote
- D. Next scroll **UP** or **DOWN** and move the channel to where you would like it to appear in the list and press the **BLUE (RECALL)** button. Continue this with the various channels until you are satisfied with the list.
- E. When you are finished press the **EXIT** button on the remote and a message will display saying **SAVING...**
- F. Next press the **EXIT** button to exit out of the **MAIN MENU**

The Christian Channels:

1. Hope Channel
2. 3ABN
3. Trinity
4. God TV
5. JCTV
6. The Church Channel
7. EWTN
8. Daystar TV
9. Smile of a Child
10. Inspiration Network
11. AON (Apostolic Oneness Network)

Other Channels of Interest (non-christian)

1. Press TV
2. Russia Today