

INSTRUCTIONS FOR SCANNING THE NEW 3ABN FREQUENCY GLOBO RECEIVER

**Please note that these instructions are for Globo receiver's which has a HEALING logo on the bottom right of the screen.
PLEASE BE AWARE – THESE INSTRUCTIONS WILL BE INEFFECTIVE IF YOU HAVE PERFORMED A FACTORY RESET
Please follow the steps as listed. Do not change anything unless specified. Please do not perform a factory reset.
Christian Satellite is not liable for any damage or loss of programming that may be incurred by following these instructions.**

STEP 1 - Scanning the frequency 12546 for the new location of 3ABN

- A. Turn on your TV and receiver
- B. By using your remote press the **MENU** button and scroll to **INSTALLATION** and press the OK button.
- C. Next scroll down and select **CHANNEL SEARCH** and press the **OK** button. The receiver may request a password. Enter **9402** by using the numbers on the remote or if that does not work try **0000**
- D. Next highlight **SATELLITE** and press the **OK** button
- E. Next scroll down in the list and select highlight **OPTUS B3** and press the **OK** button
- F. Next scroll down to **TRANSPONDER** and press the right arrow button until you see number **10**
- G. Next scroll down to **FREQUENCY** and enter **12546** by using the numbers on the remote
- H. Next scroll down to **SYMBOL RATE** and enter **22500** by using the numbers on the remote
- I. Next scroll down to **POLARIZATION** and press the left or right arrow button and select **VER**
- J. Next scroll down to **SEARCH MODE** and press the left or right arrow button and select **FTA**
- K. Next scroll down to **SEARCH NETWORK** and press the left or right button on the remote to select **NO**
- L. Next scroll down and highlight **SEARCH 1 SAT** and press the **OK** button
- M. When the receiver is finished scanning highlight **EXIT** and press the **OK** button
- N. Next press the **EXIT** button twice to exit channel search.

STEP 2 – Organising channels

- A. From the **MENU** Highlight **TV CHANNEL** and press the **OK** button. The receiver may request a password. Enter **9402** by using the numbers on the remote or if that does not work try **0000**
- B. Next press the **YELLOW (TEXT)** button on the remote and you should see **MOVE** displayed in yellow on the top of the screen.
- C. Next scroll **UP** or **DOWN** through the list of channels on the right of the screen and then press the **OK** button on the channels you wish to move
- D. Next by using the **UP** and **DOWN** arrow on the remote and scroll to where you would like the channel to appear in the list and press the **OK** button
- E. Continue this with the various channels until you are satisfied with the list.
- F. Once you are finished press the **EXIT** button 3 times on the remote to exit out of the menu and the receiver will save the changes.

The Christian Channels:

1. Hope Channel
2. 3ABN
3. Trinity
4. God TV
5. JCTV
6. The Church Channel
7. EWTN
8. Daystar TV
9. Smile of a Child
10. Inspiration Network
11. AON (Apostolic Oneness Network)

Other Channels of Interest (non-christian)

1. Press TV
2. Russia Today