

**INSTRUCTIONS FOR SCANNING THE NEW 3ABN FREQUENCY
PACIFIC SATELLITE DSR2882S**

PLEASE BE AWARE – THESE INSTRUCTIONS WILL BE INEFFECTIVE IF YOU HAVE PERFORMED A FACTORY RESET
Please follow the steps as listed. Do not change anything unless specified. Please do not perform a factory reset.
Christian Satellite is not liable for any damage or loss of programming that may be incurred by following these instructions.

STEP 1 - Scanning the frequency 12546 for the new location of 3ABN

- A. Press the **MENU** button on your remote
- B. Highlight **INSTALLATION** and press the **OK** button.
- C. Next scroll down and highlight **CHANNEL SEARCH** and press the **OK** button. You should now be in the **CHANNEL SEARCH** menu
- D. Highlight **SATELLITE** and press **OK**. A window will pop up. Scroll through the list of satellites and highlight **OPTUS B3 156E** and press the **OK** button on the remote
- E. Next scroll down to **SEARCH MODE** and scroll left or right and select **MANUAL**
- F. Next scroll down to **FREQUENCY** and by using the numbers on the remote enter **12546**
- G. Next Scroll down and highlight **SYMBOL RATE** and by using the numbers on the remote enter **22500**
- H. Scroll down to **POLARISATION** and by scrolling left or right select **VER**
- I. Scroll down to **NETWORK SEARCH** and by scrolling left or right select **OFF**.
- J. Next press the **OK** button and the receiver will begin searching for the new frequencies and channels
- K. Once the scan has finished press the **OK** button once and then press the **MENU** button – the system will save and exit **CHANNEL SEARCH**. When it has finished saving, press the **EXIT** button.

STEP 2 – Organising channels

- A. From the **ORGANISING TV CHANNEL** menu, select **MOVE** at the top of the screen by scrolling across to it using the remote.
- B. Next scroll through the channel list and press the **OK** button on the channel that you would like to move. By using the numbers on the remote, enter the number in the list of where you would like the channel to appear in the list. For example, if you would like the selected channel to be number 10 in the list, enter 0010 and press OK – the channel will then move. (For further information, please refer to your user manual)
- C. Continue this with the various channels until you are satisfied with the list.
- D. Once you are finished press the **EXIT** button on the remote and the receiver will save and exit.
- E. Now press the **EXIT** button to exit the menu.

The Christian Channels:

1. Hope Channel
2. 3ABN
3. Trinity
4. God TV
5. JCTV
6. The Church Channel
7. EWTN
8. Daystar TV
9. Smile of a Child
10. Inspiration Network
11. AON (Apostolic Oneness Network)

Other Channels of Interest (non-christian)

1. Press TV
2. Russia Today